



## Wiring Diagram and Fuses


Karmann Ghia Models · From September 1957 · Chassis No. 1 649 253

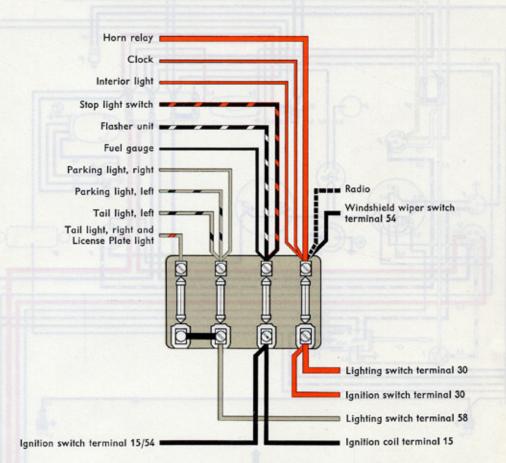

Fuse box on the back of the instrument panel

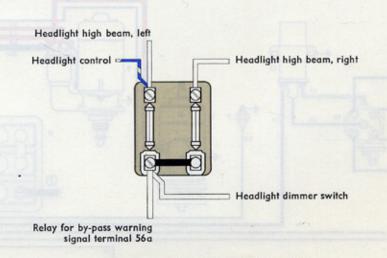

Fuse box adjacent to the Fuel tank

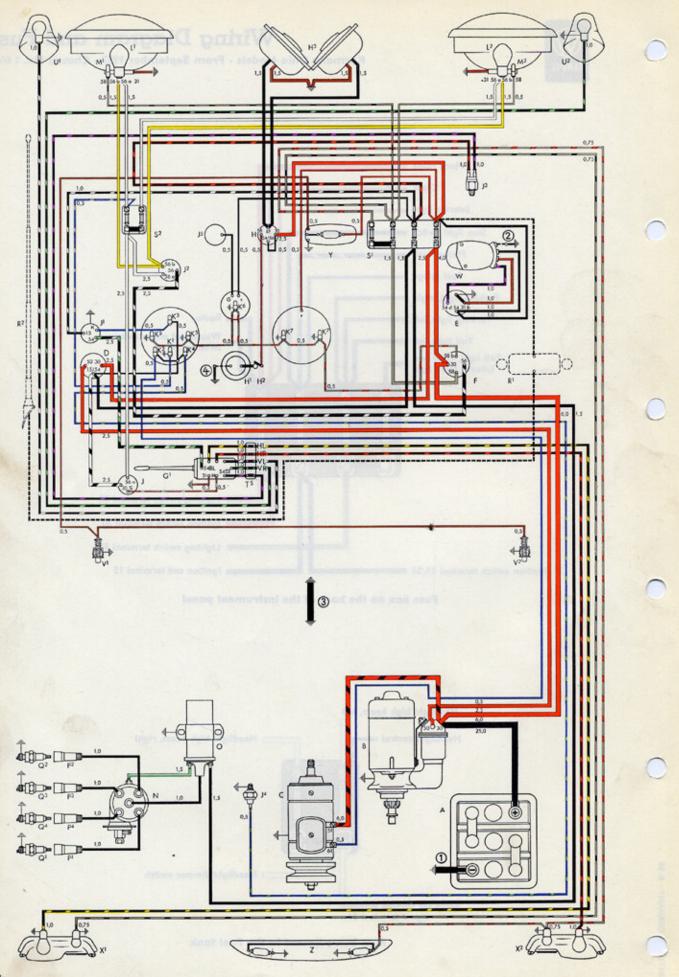

E-1 12

## Key to Wiring Diagram · Karmann-Ghia

(Coupé and Convertible) From September 1957 · Chassis No. 1 649 253

A	-	Bat	tery

B - Starting Motor

C - Generator

D - Ignition/Starting Switch

E - Windshield Wiper Switch

F - Lighting Switch

G¹ - Direction Indicator Switch with By-pass Warning Signal

H - Double Horn Relay

H1 - Horn Sliding Contact Ring

H2 - Horn Contact Brush

H3 - Double Horn

J - Relay for By-pass Warning Signal

J1 - Flasher Unit

J2 - Headlight Dimmer Switch

J<sup>3</sup> - Stop Light Switch

J4 - Oil Pressure Switch

J5 - Fuel Gauge

K1 - High Beam Indicator Light

K2 - Generator Control Light

K<sup>3</sup> - Flasher Control Light

K4 - Oil Pressure Warning Light

K5 - Speedometer Light

K6 - Fuel Gauge Light

K7 - Clock Light

L1 - Two-Filament Bulb for Headlight, Left

L2 - Two-Filament Bulb for Headlight, Right

M1 - Parking Light, Left

M2 - Parking Light, Right

N - Ignition Distributor

O - Ignition Coil

P1 - Spark Plug Connector for Cylinder 1

P2 - Spark Plug Connector for Cylinder 2

P3 - Spark Plug Connector for Cylinder 3

P4 - Spark Plug Connector for Cylinder 4

Q1 - Spark Plug for Cylinder 1

Q2 - Spark Plug for Cylinder 2

Q3 - Spark Plug for Cylinder 3

Q4 - Spark Plug for Cylinder 4

R1 - Radio

R2 - Antenna

S1 - Fuse Box (four fuses)

S2 - Fuse Box (two fuses)

T5 - Connector, quintuple

U1 - Flashing Type Direction Indicator, left front

U2 - Flashing Type Direction Indicator, right front

V1 - Door contact switch, left

V2 - Door Contact Switch, Right

W - Windshield Wiper Motor (3 leads)

X1 - Stop/Tail/Flashing Type Direction Indicator, Left

X<sup>2</sup> - Stop/Tail/Flashing Type Direction Indicator, Right

Y - Interior Light

Z - License Plate Light

(1) - Battery Ground Strap

 Ground Strap between Windshield Wiper Motor and Body

(3) - Ground Strap Between Transmission and Frame

(4) - Steering Column Flange Ground Strap